 




# YR2118B

 
Wireless transmitter instruction

[stop]+[up/open]



Press 5 seconds, press [programming button] to confirm, switch on touch control.


[stop]+[down/close]



Press 5 seconds, press [programming button] to confirm, switch off touch control.

## ◆ Set remote control channel

 ① Enter into programming




Press programming button for 3 seconds, until LED light on.

② Choose channels



Press [Channel Choose Left] (or [Channel Choose Right]) button to choose the needed channel.

 ③ Send the current channel code



Press [Channel Setting] button on the back of transmitter till the indicator light of the motor sparkles.

④ Confirmation



Press [Setting] button again to confirm the operation. The remote channel is set.

## ◆ Delete remote control channels

① Enter into setting codes status

 


Press [Setting] button 3 seconds to indicate till the indicator light on.

② Delete remote control channels




Press [Setting] button again for 7 seconds till the light off. Channel deleting is completed.

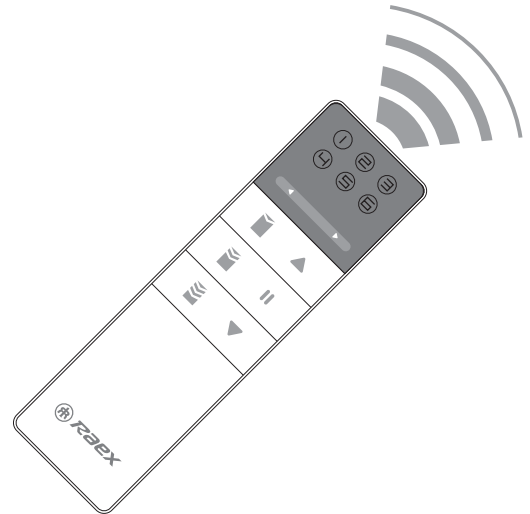

## Specification

 Model	YR2118B
Frequency	433.92MHz±75KHz
Mould	ASK
Battery	CR2032×1
Channel	6个

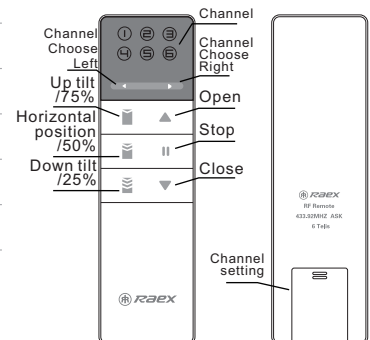

## Warranty

Series motor carry a three years warranty from the date of invoice. Factitious damage and dismantle are exclusive of warranty.

## Button function

### LED light

Channel, LED 1, channel 1, LED 2, channel 2....LED 6, Channel 6,  
LED on means signal transmit

Choose the previous channel

Press[Channel selection-left], the current channel LED light will be on, Press[Channel selection left]within 3 seconds, press channel 6. channel 5, channel 4 accordingly. Channel 3-channel 2, channel 1... channel 6 in cyclic selection, the LED light will be off if no any operation within 3 seconds.

Choose the next channel

Press[Channel selection-right]the current channel LED light will be on, Press[Channel selection-right]within 3 seconds, press channel 1. channel 2, channel 3 accordingly.

Channel 3-channel 2, channel 1... channel 6 in circle selection, the LED light will be off if no any operation within 3 seconds.

#### ① [Up/Open]



open the curtains.

#### ② [Stop]



Stop the curtain.

#### ③ [Down/Close]



Close the curtains.

#### ④ [Up Tilting/75%]



Short time press, up tilting, press 1.5 second, move to IP1 75% limit position.

#### ⑤ [Horizontal Position/50%]



 
Press tilt to horizontal position, press 1.5 second, move to IP3 50% limit position.

#### ⑥ [Down Tilting/25%]



Presstilt to Down tilting, press 1.5 second, move to IP2 25% limit position.

#### ⑦ [Channel Setting]




Open the case, press the button for programming.

## Combination button

 
◆The specific operation of combination keys is as follows

#### [Channel Choose Left]+[Stop]




Direction change, After entering into programming, press Programming Button to confirm.

#### [Channel Setting]+[Up/Open]

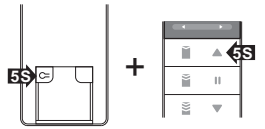 


Press 5 seconds, enter into [Up/Open], limit setting, move to position you like, press Programming Button to confirm.

#### [Channel Setting]+[Stop]

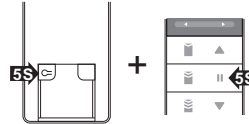 

Press 5 seconds, delete limit.

#### [Channel Setting]+[Down/Close]

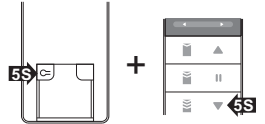 


Press 5 seconds, enter into [Down/Close] limit setting, move to the position you like, press Programming Button to confirm.

#### [Up/Open]+[Down/Close]



 
External control mode, Press up and down button and then confirm by programming button.

#### [Channel Setting]+[Up Tilting/75%]

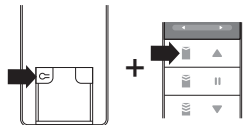


Press programming button and IP1 button.

#### [channel Setting]+[Horizontal Tilting/50%]

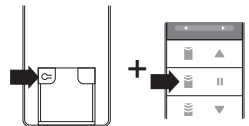 

Quick press to IP3, long press for 50% limit position.

#### [Channel Setting]+[Down Tilting /25%]

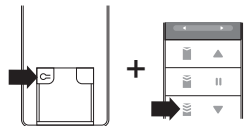 

Quick press to IP2, long press for 25% limit position

### ◆ Remark

1. All button's function should be work with motor/controller
2. Choose current channel for all function setting
3. Hold programming button when press up/down button for limit setting